

راهنمای قطعات الکتریکی

Electric Component

WIRING DIAGRAMS**LIST COMPONENTS (SECTION 1) :**

- B001 : mixed bridge block 1.
- B002 : mixed bridge block 2.
- B003 : mixed bridge block 3.
- BB00 : battery *.
- BB01 : battery assembly (rear*) .
- BB02 : battery assembly (lower front) .
- BB03 : battery assembly (upper front) .
- BB04 : battery central assembly unit .
- BB05 : starter battery .
- BB06 : battery .
- BB10 : battery +ve control unit.
- BCP3 : 3 relay protection switch unit .
- BF00: (passenger compartment) fuse box.
- BF01 : fuse box (under bonnet).
- BF02 : fuse box *(luggage compartment).
- BGP0 : centralized control unit (police) .
- BH12 : 12 fuse box (passenger compartment).
- BH28 : 28 fuse box (passenger compartment).
- BMF1 : maxi fuse unit.
- BMF2 : maxi fuse unit.
- BMF3 : maxi fuse unit.
- BMF4 : maxi fuse unit.
- BM27 : engine fuse board with 27 fuse(s) .
- BM34 : engine fuse board with 34 fuse(s) .
- BSI1 : built_in systems interface .
- C001: diagnostic connector *.
- C002 : breakdown wire connector .
- C004 : instrument panel diagnostic connector .
- C1030 : test connector -engine running information.
- C1042 : general circuit breaker optional connector .
- C1100 : ignition test connector .
- C1105 : ignition suppression connector .
- C1110 : ignition adjustment connector for idle.
- C1200 : injection test connector .
- C1250 : emission control adjustment connector .
- C1260 : supply pump fuse holder connector .
- C1265 : carburettor heating resistor fuse-holder connector .
- C1270 : EGR test connector .
- C1300 : injection-ignition test connector .
- C1310: ignition/injection fuse holder connector.
- C1360 : oxygen sensor heater fuse holder connector .
- C1400 : TDC connector.
- C1450: system development connector.
- C1500 : fan operation test connector .

C1630 : * test connector (* automatic gearbox).
C1700 : electronic management test connector.
C1800 : LPG diagnostic connector *.
C200 : caravan socket connector ,
C2310 : driving school dual control connector .
C2600 : front fog-lamp fuse holder connector .
C310 : caravan lighting battery positive supply connector .
C4640 : fuse-holder connector for supply to chronograph.
C6235 : door locking test connector .
C6301 : test connector (storing in memory_seat).
C6540 : pre-tensioning seat belts test connector.
C6560 : test connector airbag.
C6570 : air bag test connector + pre-tensioner .
C6640 : ride height circuit bleeding connector .
C6860 : electric hood test connector .
C7000 : anti-lock brake test connector .

WIRING DIAGRAMS

C7001 : ABS power fuse holder connector .
C7050 : traction control test connector .
C7100 : variable power steering test connector.
C7215 : multifunction screen diagnostic connector .
C7710: suspension test connector.
C8000 : heater test connector .
C8201 : immobiliser test connector *
C8400 : radio battery + ve connector .
C8600 : alarm test connector .
C861 : alarm supply connector *.
C8630 : protection unit diagnostic connector .
CA00 : ignition switch *.
CC51 : signaling central control assembly (police) .
CP00 : rear 12 V socket .
CPC0 : sliding door contact assembly (left) .
CPC1 : sliding door contact assembly (right) .
CP01 : front 12V socket .
CT00 : steering wheel rotary connector .
CV00 : switch unit under steering wheel (com 2000) .
DRA0: shielded earth .
DRA1: shielded earth 1 .
ECV0 : control assembly steering wheel *.
MF00 : starting battery maxi fuse.
MF01 : alternator maxi fuse .
MF175 : MEGA_ engine compartment fuse 175 A.
PS00 : connector board.
PSF0 : connection board -fuse box (passenger compartment) .
PSF1 : connection board -fuse box (under the bonnet) .

PSF2 : connection board -fuse box (luggage compartment).
V0004 : stop warning lamp.
V1000 : charge warning lamp.
V1001 : traction batteries correct charge lamp.
V1002 : traction batteries discharged warning lamp.
V1017 : 12 V converter fault warning lamp.
V1100 : ignition test warning lamp.
V1150 : pre-heat warning lamp.
V1200 : injection test warning lamp.
V1203 : pump cut-off light.
V1300 : engine diagnosis warning lamp.
V1700 : temporary fault warning lamp.
V1701 : forward drive warning lamp.
V1702 : reverse drive warning lamp.
V1703 : insulation fault warning lamp.
V1800 : gas supply warning lamp .
V2000 : rear fog lamp warning lamp.
V2010 : front fog lamp warning lamp ..
V2300 : hazard warning warning lamp.
V2310 : right or left flasher indicator lamp.
V2320 : LH direction indicator warning lamp.
V2330 : RH direction indicator warning lamp.
V2600 : side lamp warning lamp.
V2610 : dipped beam warning lamp.
V2620 : main beam warning lamp.
V2660 : front fog lamp warning lamp.
V4010: coolant low level warning lamp.
V4017 : battery electrolyte level warning lamp.
V4020 : engine coolant maximum temperature warning lamp.
V4040 : screen wash fluid low level warning lamp.
V4050 : water in diesel fuel warning lamp.
V4110: engine oil low pressure warning lamp.
V4120 : engine oil low level warning lamp.
V4130 : maximum engine oil temperature warning light.

WIRING DIAGRAMS

V4200 : choke warning lamp.
V4205: air cleaner blocked warning light.
V 4300 : low fuel level warning lamp.
V 4320 : tank cap open warning lamp .
V 4400 : hand brake warning lamp.
V 4410: brake fluid low level warning lamp.
V4420 : handbrake/low brake fluid level warning lamp.
V4430 : brake pad wear warning lamp.
V 4440 : blown bulb warning lamp.

- V 4600 : gear lever position warning lamp.
- V 4610 : gearbox oil temperature warning lamp.
- V4700 : door open warning lamp.
- V4730 : seat belt not buckled warning lamp.
- V 4800 : catalytic converter overheating warning lamp.
- V6235 : deadlocking pilot light,
- V6560 : air bag warning light (front*).
- V 6561 : side air bag warning lamp .
- V6640 : ride height correction fluid low level warning lamp.
- V6700 : differential lock test warning lamp.
- V6709 : reduction gear change warning lamp.
- V7000 : ABS diagnostic warning lamp.
- V7001 : ABS operational indicator light.
- V7050 : traction control diagnostic warning lamp.
- V7060 : traction control operation lamp.
- V7310 : cruise control indicator lamp.
- V7700 : suspension diagnostic warning lamp.
- V 7800 : stability check diagnostic warning light .
- V8018 : additional heating low fuel level warning lamp.
- V8110 : heated rear screen indicator lamp.
- V 8220 : transponder warning lamp .
- 1000 : starting safety switch.
- 1005: starter inhibitor relay.
- 1010: starter .
- 1020 : alternator (*).
- 1025 : dual battery unit .
- 1030 : engine running signal relay.
- 1040 : general maintenance relay.
- 1041 : emergency stop switch.
- 1042: general relay.
- 1043 : re-setting push button.
- 1044 : diode unit .
- 1045 : auxiliary re_arving push button .
- 1086 : alarm starter cut -off relay.
- 1100 : distributor.
- 1101 : engine coolant thermistor for advance module.
- 1102: advance module.
- 1104 : advance correction solenoid.
- 1105 : ignition amplifier module *.
- 1110 : ignition distributor .
- 1115 : cylinder reference sensor *.
- 1116 : syylinder reference sensor 1 .
- 1117 : syylinder reference sensor 2 .
- 1120 : knock sensor * .
- 1121 : knock sensor 1 .
- 1122 : knock sensor 2 .
- 1125 : accelerator pedal switch.

- 1127 : ignition supply relay.
- 1130 : ignition control unit.
- 1131 : cylinder 1 ignition coil.
- 1132 : cylinder 2 ignition coil.
- 1133 : cylinder 3 ignition coil.

WIRING DIAGRAMS

- 1134 : cylinder 4 ignition coil.
- 1135 : ignition coil.
- 1136 : ignition coil capacitor .
- 1137 : cylinder 5 ignition coil .
- 1138 : cylinder 6 ignition coil .
- 1140 : emission control module for carburettor.
- 1141 : coolant heating plugs supply relay 1 .
- 1142 : coolant heating plugs supply relay 2 .
- 1143 : coolant heating plugs supply relay 3 .
- 1145 : throttle opening solenoid valve.
- 1146 : coolant heating plugs supply relay 1 / 2 .
- 1147 : coolant heating plugs supply relay 3 / 4 .
- 1148 : coolant heater relay 1 .
- 1149 : coolant heater relay 2 .
- 1150 : pre-heat control unit (*).
- 1155 : pre-heat relay.
- 1156 : post-heat relay.
- 1157 : post-heat thermal switch.
- 1158 : pre_ post heating control unit .
- 1160 : glow plugs.
- 1161 : no.1 cylinder glow plug.
- 1162 : no.2 cylinder glow plug.
- 1163 : no.3 cylinder glow plug.
- 1164 : no.4 cylinder glow plug.
- 1190 : water circuit heater .
- 1200 : fuel pump relay.
- 1201 : injection pump relay.
- 1202 : tachymetric relay.
- 1203 : inertia switch.
- 1204 : impact safety relay.
- 1205 : fuel pump fuse.
- 1206 : decanting pump control unit.
- 1207 : decanting pump.
- 1208 : diesel injection pump (advance corrector, fuel cut-off solenoid).
- 1209 : scavenge pump.
- 1210 : fuel pump.
- 1211 : fuel gauge pump.
- 1212 : air tank solenoid.
- 1213 : air pump relay.

- 1214: econoscope.
- 1215 : purge canister solenoid valve.
- 1216 : canister simulation resistor .
- 1217: canister bleed cut-off solenoid.
- 1218: ignition advance cut-off solenoid.
- 1219 : throttle potentiometer* (*injection, automatic transmission).
- 1220 : coolant temperature sensor .
- 1221 : diesel thermistor .
- 1222 : accelerometer .
- 1223 : injection air solenoid valve.
- 1224 : absorber closing solenoid valve.
- 1225 : idling regulation stepper motor (MMBA).
- 1226 : idle regulation motor and idle switch.
- 1227: fuel tank pressure sensor.
- 1228 : idle regulation motor and idle switch + Hall effect sensor .
- 1229 : turbo regulator solenoid with variable resistance.
- 1230 : supplementary air device.
- 1231 : automatic transmission idling speed solenoid unit.
- 1232 : idle maintaining solenoid valve.
- 1233 : turbocharger pressure regulation solenoid valve.
- 1234 : carburettor damper solenoid valve.
- 1235 : carburettor breather solenoid valve.

WIRING DIAGRAMS

- 1236: overrun cut-off solenoid valve.
- 1237 : pulsair solenoid valve.
- 1238 : 2 volume V ASC solenoid.
- 1239 : idling regulation solenoid valve.
- 1240 : induction air temperature sensor .
- 1241: pulsair pump.
- 1242 : pulsair relay.
- 1243 : variable solenoid valve 1.
- 1244 : EGR proportional solenoid valve.
- 1245 : altitude switch.
- 1246 : EGR function supply relay.
- 1247 : EGR coolant thermal switch.
- 1248 : EGR calibration resistor .
- 1249 : load lever potentiometer (EGR),
- 1250 : EGR exhaust gas recycling control unit.
- 1251 : EGR vacuum pump.
- 1252: diesel advance corrector relay.
- 1253 : all or nothing solenoid valve (EGR),
- 1254 : EGR load lever switch.
- 1255: fuel cut-off solenoid valve.
- 1256: advance solenoid valve (diesel).
- 1257: -flow solenoid (diesel).

- 1258: + flow solenoid (diesel).
- 1259 : + / -flow solenoid (diesel) .
- 1260 : injector needle lift sensor .
- 1261 : accelerator pedal position sensor .
- 1262 : motorised butterfly.
- 1263 : EGR + butterfly solenoid valve .
- 1264 : swirl solenoid valve .
- 1265 : carburettor heater thermal switch.
- 1266 : carburettor heater relay.
- 1267 : diesel butterfly solenoid valve *(air intake) .
- 1268 : variable solenoid valve 2.
- 1269 : carburettor heating resistor relay.
- 1270 : carburettor or throttle housing heater resistor .
- 1271: cut-off solenoid valve.
- 1272: cut-off solenoid assembly, carburettor heater resistor .
- 1273: oil breather re-heat resistor 1.
- 1274: oil breather re-heat resistor 2.
- 1275 : *carburettor.
- 1276 : diesel heater .
- 1277 : diesel high pressure pump piston deactivation solenoid 3 .
- 1278 : start of compression sensor *.
- 1280 : long 2 volume V ASC solenoid.
- 1281 : short 2 volume V ASC solenoid.
- 1301 : automatic transmission information relay (injection).
- 1302: injection and supply relay.
- 1303: injection and ignition supply relay.
- 1304 : engine management multi-function double relay.
- 1305 : mixture potentiometer .
- 1306 : automatic gearbox relay shunt ..
- 1307 : power multifunction double relay.
- 1308 : engine oil pressure sensor .
- 1309 : turbocharger air thermistor .
- 1310 : air flow sensor.
- 1311 : turbo pressure sensor.
- 1312 : induction air pressure sensor .
- 1313: engine speed sensor.
- 1314: altitude sensor.
- 1315 : injection resistor .
- 1316 : throttle position sensor .

WIRING DIAGRAMS

- 1317: diesel pump lever position sensor.
- 1318 : throttle switch unit.
- 1319 : injection coding resistor.
- 1320 : engine management control unit.
- 1321 : diesel high pressure sensor *.

- 1322 : diesel high pressure regulator *.
- 1323 : high temperature sensor (exhaust gas).
- 1324 : proportional dosing solenoid valve.
- 1325 : petrol high pressure sensor *.
- 1326 : injection unit supply fuse.
- 1327: cam position sensor (diesel pump).
- 1328 : rotor position sensor (diesel pump).
- 1329: slide position sensor (DIESEL pump)
- 1330: injector *.
- 1331 : injector cylinder no.1.
- 1332 : injector cylinder no.2.
- 1333 : injector cylinder no.3.
- 1334 : injector cylinder no.4.
- 1335 : injector cylinder no.5.
- 1336 : injector cylinder no.6.
- 1337 : injector cylinder no.7.
- 1338 : injector cylinder no.8.
- 1339 : injector cylinder no.9.
- 1340 : injector cylinder no.10.
- 1342 : motor multi-function control unit.
- 1345: oxygen sensor heater relay.
- 1348 : oxygen sensor heater fuse.
- 1350 : front oxygen sensor .
- 1351 : rear oxygen sensor .
- 1352 : front downstream oxygen sensor *.
- 1353 : front upstream oxygen sensor *.
- 1354 : rear downstream oxygen sensor *.
- 1355 : front upstream oxygen sensor *.
- 1400 : TDC sensor.(*)
- 1500 : fan relay.
- 1501 : cooling fan fuse.
- 1502 : left hand fan supply relay.
- 1503 : right hand fan supply relay.
- 1504 : left and right hand fan series supply relay.
- 1505 : cooling fan thermal switch.
- 1506 : two-speed cooling fan resistor .
- 1507: fan control (coolant) temperature sender unit via ECU .
- 1508 : low speed fan supply relay.
- 1509 : high speed fan supply relay.
- 1510 : fan *.
- 1511 : right-hand fan.
- 1512: left-hand fan.
- 1513 : cooling fan electronic chopper .
- 1515: left-hand interference suppression filter,
- 1516: right-hand interference suppression filter.
- 1517 : cooling fan control flap .
- 1518 : cooling fan 3 speed resistor *.

- 1520 : engine post -cooling thermal switch.
- 1525 : engine post -cooling relay.
- 1526 : engine post -cooling time switch.
- 1530 : post -cooling device shunt.
- 1550 : turbo coolant pump.
- 1551 : turbo coolant pump fuse.
- 1555 : turbo coolant pump control relay.
- 1600 : selector lever position switch.
- 1601: one-touch control lever sensor.

WIRING DIAGRAMS

- 1602 : one_touch control switch *.
- 1606 : parking position buzzer supply relay.
- 1607 : auto transmission selector and display lamp supply relay.
- 1613: auto transmission engine speed sensor.
- 1615 : *pressure sensor (* automatic gearbox).
- 1620 : vehicle speed sensor .(*)
- 1621 : vehicle speed sensor (*) (*automatic gearbox).
- 1622 : automatic gearbox output speed sensor .
- 1625 : vehicle speed interface module.
- 1630 : automatic transmission control unit
- 1631 : torque reduction solenoid valve .
- 1632 : pedal position contact,
- 1635 : automatic gearbox electrohydraulic block.
- 1636 : auto transmission position sensor .
- 1637 : automatic gearbox kickdown switch.
- 1638 : auto transmission lever blocking actuator
- 1639 : accelerator pedal foot off contact.
- 1640 : automatic transmission programme selector.
- 1642 : gear lever blocking actuator control relay.
- 1643 : key blocking actuator control relay.
- 1644 : key blocking actuator .
- 1645 : automatic gearbox electronic piloting .
- 1646 : automatic gearbox solenoid valve block ,
- 1700 : electric management control unit.
- 1701 : temperature monitoring module - lower front battery voltage.
- 1702 : temperature monitoring module - upper front battery voltage.
- 1703 : temperature monitoring module - rear battery voltage.
- 1704 : relay housing.
- 1705 : electronic tool kit.
- 1713 : accelerator potentiometer .
- 1714: energy gauge.
- 1718: electric motor cooling fan control thermistor
- 1722 : battery electrolyte cooling fan control thermistor .
- 1724 : additional heating switch,
- 1725 : additional heating.

- 1726 : additional heating fuel pump.
- 1727 : traction battery coolant pump.
- 1728 : electronic management control unit coolant pump .
- 1729 : electric vehicle coded anti_start relay .
- 1730 : 73064 not found .
- 1732 : battery heating relay.
- 1733 : battery heating resistor .
- 1740 : electric traction motor.
- 1746 : electric motor cooling fan.
- 1747: charging socket.
- 1748 : battery charging socket unit.
- 1800 : gas control unit .
- 1801 : absolute pressure sensor .
- 1802 : dosing solenoid valve .
- 1803 : tank solenoid valve .
- 1804 : vapour pressure relief solenoid valve .
- 1805 : 3 relay housing .
- 1806 : oxygen sensor relay .
- 1807 : diode bridge .
- 1808 : gas supply unit .
- 1809 : linear actuator.
- 1810 : petrol gas switch .
- 1811 : petrol / gas timer relay .
- 1812 : gas supply fuse unit .
- 1813 : diagnostic warning light cut off relay .
- 1814 : gas pressure gage .

WIRING DIAGRAMS

- 1815 : LPG / petrol dilauge double relay .
- 1816 : 12 V / 5V voltage adopter fitting .
- 1817 : LPG gauge .
- 1818 : coolant thermistor " 8591 , " 150)"
- 1819 : LPG gauge damping unit .
- 1820 : gas distribution motor .
- 1821 : LPG solenoid valve + gauge
- 1822 : adaption fitting diode 12V/5V .
- 1823 : adaption fitting resistor 12V/5V .
- 1824 : inlet air flap solenoid valve *.
- 1825 : gas supply solenoid valve *.
- 1826 : fuel pump cut off relay .
- 0002 : lighting and signalling switch.
- 2000 : rear fog lamp switch.
- 2001 : lighting/wiping stalk.
- 2002: driving school buzzer (Germany).
- 2003 : driving school instructor's control unit.
- 2004: driving school jack socket (Germany).

- 2005: rear fog lamp relay.
- 2006: driving school switch (Germany).
- 2007: driving school footwell lighting (Germany).
- 2010: rear fog lamps (left side).
- 2011 : rear fog lamps (center) .
- 2015: rear fog lamps (right side)
- 2016 : rear fog lights control unit.
- 2100 : stop lamp switch *.
- 2101 : redundant brake switch *.
- 2110 : additional stop lamps.
- 2111 : additional stop lamps ((left side)).
- 2112 : additional stop lamps ((right side)).
- 2200 : reverse lamp switch.
- 2202 : reverse drive control switch.
- 2210: left-hand reverse lamp switch.
- 2215: right-hand reverse lamp switch.
- 2300 : hazard warning switch.
- 2305 : flasher unit.
- 2310 : direction indicator switch.
- 2320: left-hand front direction indicator lamp.

LIST COMPONENTS (SECTION 2) :

- 2325: right-hand front direction indicator lamp.
- 2330: left-hand rear direction indicator lamp (if separated).
- 2335: right-hand rear direction indicator lamp (if separated).
- 2340 : left-hand side repeater flasher.
- 2345: right-hand side repeater flasher.
- 2400 : side lamp day running lights line relay.
- 2401 : dipped beam day running lights relay.
- 2402 : day_light running light relay shunt .
- 2410 : dipped beam relay.
- 2411: dim-dip relay.
- 2415: dim-dip resistor.
- 2500 : horn button.
- 2501 : horn button in steering wheel.
- 2505 : air horn compressor relay.
- 2510 : air horn compressor .
- 2520 : horns.
- 2521: low note horn.
- 2522: high note horn.
- 2523 : pedestrian buzzer .
- WIRING DIAGRAMS 2525 : air horn fuse.
- 2530: siren unit (police).
- 2531: police siren switch.

- 2532 : day/night police siren switch.
- 2535: siren speaker (police).
- 2600 : lamp rotator .
- 2605 : dipped beam relay.
- 2606 : main beam relay.
- 2610: left-hand headlamp.
- 2615: right-hand headlamp.
- 2620 : front left side light .
- 2625: front right side light .
- 2630 : left-hand tail lamp.
- 2631: right-hand tail lamp on boot lid.
- 2632: left-hand tail lamp on boot lid.
- 2633 : number plate right-hand lamp.
- 2634 : jack socket shunt .
- 2635: right-hand tail lamp.
- 2636 : number plate lamp.
- 2637 : jack plug for rotating lamp.
- 2638 : rotating lamp.
- 2639 : rotating lamp switch.
- 2640 : left-hand front door marker lamp.
- 2641 : front right side marker .
- 2642 : front left side marker .
- 2643: rear right side marker.
- 2644 : rear left side marker .
- 2645: right-hand front door marker lamp.
- 2650: left-hand rear door marker lamp.
- 2651 : police car bar across roof.
- 2655: right-hand rear door marker lamp.
- 2656 : rear facing flashing stop lights.
- 2657 : rear facing flashing stop lights central unit (roof tail lamps).
- 2658 : rear roof lamp switch.
- 2659 : orange light switch *.
- 2660 : front fog lamp switch.
- 2662 : front fog lamp inhibitor relay (front*).
- 2665 : 82247 not found .
- 2670: left-hand front fog lamp.
- 2675: right-hand front fog lamp.
- 2680 : long range driving lamp switch.
- 2685: long range driving lamp relay.
- 2690 : left hand long range driving lamp.
- 2695 : right hand long range driving lamp.
- 3000: left hand front door flange switch .
- 3001 : right hand front door flange switch.
- 3002: door aperture switch-rear left_hand door .
- 3003: door aperture switch-rear right_hand door .
- 3004 : lighting timer unit.
- 3005 : courtesy lamp timer relay.

- 3006 : courtesy lamp switch.
- 3010 : front courtesy lamp.
- 3012 : courtesy lamp (front LH).
- 3013 : courtesy lamp (front RH).
- 3015 : roof console + integral functions.
- 3019 : rear courtesy lamp switch.
- 3020 : rear courtesy lamp.
- 3022 : rear left hand courtesy lamp *.
- 3023 : rear right hand courtesy lamp *.
- 3024: left-hand courtesy lamp.
- 3025: right-hand courtesy lamp.

WIRING DIAGRAMS

- 3029 : centre courtesy lamp switch.
- 3030 : central courtesy lamp.
- 3031: front right-hand reading lamp.
- 3032: front left-hand reading lamp.
- 3033: rear right-hand reading lamp.
- 3034 : rear left-hand reading lamp.
- 3035 : footwell illumination.
- 3036 : right hand footwell light .
- 3037 : left hand footwell light .
- 3040 : left-hand front door tread lamp.
- 3042 : left-hand rear door tread lamp.
- 3045: right-hand front door tread lamp.
- 3047: right-hand rear door tread lamp.
- 3050 : lighting rheostat.
- 3051 : heater control panel lamp.
- 3052: console lamp.
- 3053 : cigar lighter lamp.
- 3054 : ashtray lamp.
- 3055 : radio cover control lamp.
- 3056 : ashtray cover control lamp.
- 3057 : left _hand vent lighting *.
- 3058 : right _hand vent lighting *.
- 3059 : center _vent lighting *.
- 3060: vanity mirror lamp (on the driver's side).
- 3061: vanity mirror lamp (passenger's side),
- 3062 : rear ashtry lighting *.
- 3065 : map reading lamp.
- 3070 : selector lever lamp.
- 3075 : ignition switch lamp.
- 3080 : police visor lamp.
- 3085 : central passenger courtesy light switch (white light).
- 3086 : central passenger courtesy light switch (blue light).
- 3087 : parking lamps switch.

3088 : parking lamps relay.
3100 : boot switch.
3105: boot (or luggage compartment) lamp.
3106 : luggage compartment left_hand lighting *.
3107 : luggage compartment right_hand lighting *.
3110 : glove box lamp switch.
3115 : glove box lamp.
3120 : bonnet switch .
3121 : engine compartment lamp.
3122 : engine compartment lamp switch .
3125: luggage compartment lamp relay.
3126 : luggage compartment light timer relay.
0004 : instrument panel .(*)
4000 : instrument panel centralised electronic module.
4005 : coolant temperature sensor .
4010 : engine coolant level switch.
4015 : engine coolant level unit.
4020 : engine coolant thermal switch.
4025 : temperature sensor -engine coolant thermal switch (*gauge).
4026 : coolant temperature gauge.
4030 : coolant thermistor (gauge) .
4035 : pre-warning heat switch.
4040 : coolant and air conditioning thermistor .
4050 : water in fuel sensor .
4060 : battery charge indicator .
4100 : temperature gauge + engine oil level.
4101 : engine oil temperature display.
4102: engine oil level gauge.

WIRING DIAGRAMS

4103: temperature sensor (engine oil) .
4104: engine oil pressure sensor.
4105: engine oil pressure gauge.
4106 : *pressure sensor / oil pressure switch.
4110: oil pressure switch.
4111 : temperature sensor + engine oil thermal switch.
4120 : engine oil level sensor.
4130 : engine oil thermal switch.
4200 : choke switch.
4205 : air cleaner pressure switch.
4210 : *tachometer .(if separate)
4240 : induction pressure sensor.
4241: turbocharge pressure gauge.
4300 : low fuel level switch.
4310 : fuel gauge.
4311 : fuel pump electronic damping unit .

- 4315: fuel gauge (transmitter).
- 4320 : tank cap present switch.
- 4330 : fuel flow meter (trip computer).
- 4335 : fuel consumption interface unit.
- 4340 : fuel consumption.
- 4341: current fuel consumption indicator.
- 4400 : handbrake switch.
- 4401 : parking brake warning lamp diode.
- 4402 : diode buzzer reverse.
- 4405 : vacuum pressure switch control of the brake servo vacuum.
- 4410: brake fluid level switch.
- 4420 : ABS warning lamp relay.
- 4430 : front left brake pad wear contact.
- 4431 : front right brake pad wear contact.
- 4432 : rear left brake pad wear contact.
- 4433 : rear right brake pad wear contact.
- 4440 : bulb failure detection control unit.
- 4445: blown bulb relay (warning lamp).
- 4450 : brake warning lamp relay (Australia).
- 4500 : ride height correction fluid level switch.
- 4605: selection or programme display.
- 4610 : gearbox oil thermal switch.
- 4630 : speedometer.
- 4635 : tachograph electronic converter .
- 4700 : left-hand front door lock switch (door open detection) (if different 3000).
- 4701: right-hand front door lock switch (door open detection) (if different 3001).
- 4702: left-hand rear door lock switch (door open detection) (if different 3002).
- 4703: right-hand rear door lock switch (door open detection) (if different 3003).
- 4704 : bonnet closed switch (bonnet open detection).
- 4705 : boot lock switch (boot open detection).
- 4710: headlamp flash relay.
- 4715 : door open buzzer .
- 4716: parking brake position reminder buzzer.
- 4720 : lamps on buzzer relay.
- 4725: lamps on + ignition key in buzzer relay.
- 4730 : seat belt switch.
- 4735: seat belt buzzer relay.
- 4740 : overspeeding buzzer .
- 4750: anti-lock braking buzzer relay.
- 4760 : ignition key in lock switch (buzzer control).
- 4765: ignition key in lock buzzer relay.
- 4790 : electric motor reminder buzzer .
- 4800 : catalytic converter temperature sensor .
- 4805 : catalytic converter temperature control unit.
- 4900 : door open indicator display.

WIRING DIAGRAMS

- 4905 : points matrix.
- 4990 : charging flap open check contact.
- 0005 : screen wiper switch.
- 5000 : windscreen wipe/wash switch (if separate).
- 5001: rain sensor.
- 5002 : rain sensor control relay.
- 5003 : rain sensor speed control relay.
- 5004 : automatic windscreen wiper control unit.
- 5005 : windscreen wiper relay.
- 5006: front/rear wiper relay.
- 5010 : windscreen wiper timer .
- 5015 : windscreen wiper motor .
- 5016 : parking stop unit.
- 5020: wash fluid heater.
- 5021 : pipe heater .
- 5100 : windscreen wash pump.
- 5105 : heated windscreen wash jets.
- 5110: wash liquid level sensor.
- 5115 : front/rear screen wash pump.
- 5200 : tailgate wipe/wash control (if is not 5).
- 5202 : rear screen wiper switch.
- 5203 : rear screen wash switch.
- 5204 : rear wiper motor contact (if separate).
- 5205 : tailgate wiper relay.
- 5210 : rear screen wiper timer .
- 5211: left_rear screen wiper motor .
- 5212: right_rear screen wiper motor .
- 5215 : rear screen wiper motor.
- 5300 : rear screen wash pump.
- 5400 : headlamp wash timer relay.
- 5401 : head lamp wash relay *.
- 5405 : headlamp wash pump.
- 5406 : headlamp wash switch.
- 6000: left-hand door left-hand window lift switch.
- 6001: left-hand window lift front switch.
- 6002: right-hand window lift front switch.
- 6005: right-hand door right-hand window lift switch.
- 6010: right-hand door left-hand window lift switch.
- 6015: left-hand door right-hand window lift switch.
- 6016 : window lift circuit diode + sun roof.
- 6020 : front window lift + sun roof relay.
- 6021 : window lift relay.
- 6025 : window lift + sun roof supply re-connection relay.
- 6029 : driver's door one touch / safety auto reverse ECU .
- 6030 : one touch electric window control unit.
- 6031: passenger's one touch front electric window motor + control unit.
- 6032 : driver's one touch front electric window motor + control unit.

- 6033 : safety auto-reverse control unit.
- 6034 : safety auto-reverse sensor.
- 6035 : safety auto-reverse window motor * (driver's door).
- 6036 : window lift control board / rear-view mirror (driver's door).
- 6037 : window lift control board / rear-view mirror (passenger's door).
- 6038 : safety auto-reverse window motor * (passenger's door).
- 6040 : window lift motor (front LH).
- 6041 : interior handle sensor (driver's door).
- 6042 : exterior handle sensor (driver's door).
- 6043 : interior handle sensor (passenger's door).
- 6044 : exterior handle sensor (passenger's door).
- 6045 : window lift motor (front RH).
- 6100 : left-hand rear window lift rear switch.
- 6101 : right rear window lift unit + motor (one-touch).

WIRING DIAGRAMS

- 6102 : left rear window lift unit + motor (one-touch).
- 6105 : right-hand rear window lift rear switch.
- 6110 : left-hand rear window lift front switch.
- 6115 : right-hand rear window lift front switch.
- 6116 : rear electric window control panel .
- 6120 : rear window lift inhibitor switch.
- 6121 : rear function locking relay.
- 6122 : rear window lift inhibitor switch + alarm cut-off.
- 6125 : rear window lift relay.
- 6126 : rear window lift relay on + Ve AA.
- 6130 : window lift motor (rear LH).
- 6131 : right rear window lift unit + motor .
- 6132 : left rear window lift unit + motor.
- 6133 : safety auto-reverse window motor * (rear left-hand door).
- 6134 : safety auto-reverse window motor * (rear right-hand door).
- 6135 : window lift motor (rear RH).
- 6140 : rear window lift relay +heated seat
- 6200 : front left-hand door open switch.
- 6202 : driver's door lock assembly.
- 6203 : switch insulation diode (front door / rear *) .
- 6204 : rear wiper motor contact (if separate).
- 6205 : front right-hand door open switch.
- 6207 : front passenger door lock assembly.
- 6210 : rear left-hand door open switch.
- 6212 : rear left-hand door lock assembly.
- 6215 : rear right-hand door open switch.
- 6216 : boot lid open switch.
- 6217 : rear right-hand door lock assembly.
- 6218 : right-hand rear hinged door-lock assembly.
- 6219 : door unlocking safety relay.

- 6220 : door locking switch.
- 6221: right-hand rear hinged door locking switch.
- 6222 : boot lock assembly .
- 6230 : infra red door locking receiver .
- 6231 : high frequency receiver for central locking.
- 6235 : central locking control unit.
- 6237 : boot unlocking switch.
- 6240 : left-hand front door lock motor.
- 6242: front left-hand door deadlock motor.
- 6245: right-hand front door lock motor.
- 6247: front right-hand door deadlock motor.
- 6250: left-hand rear door lock motor.
- 6252: rear left-hand door deadlock motor.
- 6253 : left -hand rear hinged door locking motor .
- 6255: right-hand rear door lock motor.
- 6256: rear door lock motor.
- 6257: rear right-hand door deadlock motor.
- 6258 : right -hand rear hinged door locking motor .
- 6259: right-hand rear hinged door deadlocking motor .
- 6260 : boot or tailgate lock motor .
- 6261 : tailgate locking motor .
- 6262 : luggage compartment deadlocking motor diode .
- 6265 : fuel filler flap lock motor .
- 6266 : charging flap locking motor .
- 6300 : driver's seat sliding switch.
- 6301 : control unit for memorising seat and mirror positions.
- 6302: driver's seat adjustment assembly.
- 6303 : passenger's seat adjustment assembly.
- 6304: seat position memory ECU (passenger).
- 6305: passenger's seat sliding switch.
- 6307 : keypad for memorising seat position.

WIRING DIAGRAMS

- 6308: presence sensor.
- 6310 : driver's seat raising switch.
- 6311 : 324870294 not found .
- 6312 : 324870295 not found .
- 6315 : passenger's seat raising switch.
- 6320 : driver's seat slide motor .
- 6321: slide position sensor (driver's seat).
- 6322: height adjustment motor (driver's seat).
- 6323 : height adjustment motor (passenger's seat).
- 6325 : passenger's seat slide motor .(*)
- 6331: driver's seat height position sensor.
- 6332: driver's seat cushion front height motor.
- 6333: driver's seat front cushion position sensor .

- 6334 : driver's seat cushion rear height motor.
- 6335 : driver's seat rear cushion position sensor .
- 6337: passenger's seat cushion front height motor .
- 6339 : passenger's seat cushion rear height motor .
- 6340 : driver's seat backrest switch.
- 6341: seatback position sensor (driver's seat).
- 6345 : passenger's seat backrest switch.
- 6346 : centre armrest switch.
- 6347 : centre armrest motor .
- 6350: driver's seat backrest angle motor.
- 6355 : passenger's seat backrest inclination motor .
- 6360: driver's seat adjustment relay.

LIST COMPONENTS (SECTION 3) :

- 6365: passenger's seat adjustment relay.
- 6366 : slide high speed motor -passenger's seat.
- 6367: slide high speed motor -driver's seat.
- 6370 : adjustment pump + solenoid valve assembly- driver's seat.
- 6371 : passenger's seat backrest inflation contact.
- 6372: driver's seat backrest inflation contact.
- 6373 : driver's seat front stop position micro switch.
- 6374 : seat back locked position micro switch - driver's seat.
- 6375 : adjustment pump + solenoid valve assembly -passenger's seat.
- 6376 : passenger's seat front stop position micro switch.
- 6377 : seat back folded position micro switch passenger's seat.
- 6378: seat back locked position micro switch passenger's seat.
- 6379 : passenger's seat memorised position micro switch.
- 6380 : rear seat cushion adjustment switch.
- 6381 : rear seat adjustment motor .
- 6382: seat adjustment switch (rear RH).
- 6383 : seat adjustment switch (rear LH).
- 6384 : seat adjustment motor (rear RH).
- 6385 : seat adjustment motor (rear LH).
- 6386 : 729983686 not found .
- 6387 : 729983685 not found .
- 6388 : head-rest motor (rear RH).
- 6389 : head-rest motor (rear LH).
- 6390 : rear head-rest retracting switch .
- 6391: seat adjustment assembly (rear RH) .
- 6392 : seat adjustment assembly (rear LH) .
- 6400: driver's side rear view mirror control.
- 6405 : passenger's side rear view mirror control.
- 6406 : rear view mirror control.
- 6407 : fold back rear view mirror unit.
- 6410 : driver's side rear view mirror (electric mirror/heated mirror).
- 6415: passenger's side rear view mirror (electric mirror/heated mirror).

6420: fold-back mirror switch*.

WIRING DIAGRAMS

- 6421 : reverse indexing unit.
- 6422 : reverse indexing switch.
- 6430 : electric interior mirror.
- 6435 : anti-dazzle unit.
- 6440 : electrochrome interior mirror
- 6470 : steering wheel adjustment switch.
- 6471 : steering wheel height adjustment motor.
- 6472 : steering wheel depth adjustment motor .
- 6500 : driver's passive restraint switch.
- 6505: passenger's passive restraint switch.
- 6510 : driver's passive restraint control unit.
- 6515 : passenger's passive restraint control unit
- 6520 : passive restraint time switch relay.
- 6530: driver's passive restraint motor.
- 6535: passenger's passive restraint motor.
- 6540 : driver's pre-tensioning seat belt control unit.
- 6541 : passenger's pre-tensioning seat belt control unit.
- 6542 : pre-tensioning seat belt control unit.
- 6543 : passenger presence detector *.
- 6544 : presence detector (rear RH) .
- 6545 : presence detector rear LH.
- 6546 : presence of passenger detection unit *.
- 6551 : right_hand side air bag screen module *.
- 6552 : left_hand side air bag screen module *.
- 6553 : air bag shunt resistor *.
- 6554 : front top left_hand side air bag module .
- 6555 : front top right_hand side air bag module .
- 6556 : rear bottom left_hand side air bag module .
- 6557 : rear bottom right_hand side air bag module .
- 6558 : rear top right_hand side air bag module .
- 6559 : rear top left_hand side air bag module .
- 6560 : airbag ECU *.
- 6561 : air bag auto interference suppression control unit.
- 6562: front bottom right-hand side air bag module .
- 6563: front bottom left-hand side air bag module .
- 6564 : passenger's air bag module.
- 6565 : driver's air bag module.
- 6566 : air bag light relay *.
- 6567: right-hand impact detector.
- 6568: left-hand impact detector.
- 6569 : passenger air bag neutralisation switch.
- 6570 : air bag and pre-tensioners control unit.
- 6571 : side airbag unit (right) .

- 6572: side airbag unit (left).
- 6573 : driver's side remot control .
- 6574 : passenger side unit .
- 6575 : pre-tensioning seat-belt (driver's side).
- 6576: pre-tensioning seat-belt (passenger's side).
- 6577 : pre-tensioner (rear LH).
- 6578 : pre-tensioner (rear RH).
- 6579 : central rear pre-tensioner .
- 6600 : headlamp height adjustment control.
- 6605 : head light height adjustment unit.
- 6610: left-hand headlamp height adjustment motor .
- 6615 : right-hand headlamp height adjustment motor .
- 6616 : front body height sensor *.
- 6617 : rear body height sensor *.
- 6620 : vehicle height correction control fuse.
- 6621 : vehicle height correction motor fuse.
- 6625 : vehicle high position switch.
- 6630 : parking brake information relay (vehicle height correction).

WIRING DIAGRAMS

- 6631 : brake pedal information relay (vehicle height correction).
- 6632 : hydraulic circuit fluid pressure switch.
- 6635 : vehicle height correction control unit -sensor .
- 6636 : vehicle height correction motor relay.
- 6637 : vehicle height correction solenoid valve relay.
- 6640 : vehicle height correction electric pump motor.
- 6645 : vehicle height correction solenoid valve.
- 6646 : vehicle height correction fluid level switch.
- 6700 : differential lock control switch.
- 6701 : differential lock control solenoid valve (rear *) .
- 6702 : control solenoid valve (change to 4*4).
- 6703 : control solenoid valve (staying in 4*4).
- 6705 : differential lock fuse.
- 6706 : control relays (change to 4*4).
- 6707 : switch (change to 4*4).
- 6709 : reduction gear change closing switch.
- 6710 : front differential lock position switch.
- 6711 : closing sensor (change to 4*4).
- 6712 : differential lock opening sensor (rear *) .
- 6715 : rear differential lock position switch.
- 6720 : differential lock control unit.
- 6730 : front differential lock motor .
- 6735 : rear differential lock motor .
- 6740 : differential lock relay.
- 6750 : controlled differential control unit.
- 6755: traction control cut-off switch.

6760 : controlled proportional differential solenoid.
6800 : sun roof switch.
6801: end of sun roof travel switch .
6802: end of sun roof tilting switch .
6803 : sun roof slide relay control.
6804 : sun roof half travel control relay.
6805: sun roof relay.
6806 : sun roof zero point switch.
6807: sunroof relay in the sunroof assembly.
6808 : sun roof intermediate position switch.
6810 : sun roof motor .
6811 : sun roof one_toch motor *.
6820 : sun roof assembly.
6821 : safety auto-reverse sensor .
6825 : sunroof infra-red transmitter .
6826 : sun-roof infra red receiver.
6830 : sunroof control unit.
6840 : left-hand electric quarter light switch.
6842: left-hand electric quarter light return switch.
6845: right-hand electric quarter light switch.
6847: right-hand electric quarter light return switch.
6850: left-hand electric quarter light motor.
6855: right-hand electric quarter light motor.
6860: electric hood ECU.
6861 : electric hood switch.
6862 : electric hood electric pump motor
6863 : rear section opening solenoid .
6864 : rear section closing solenoid.
6865 : electric hood closing solenoid.
6866 : electric hood opening solenoid.
6867 : cover opening solenoid.
6868 : cover closing solenoid.
6870 : electric hood electric pump motor relay.
6871 : rear section ram switch.
6872 : electric hood ram switch.

WIRING DIAGRAMS

6873 : cover ram switch.
6874 : electric hood switch.
6875 : electric hood buzzer
6876 : electric hood buzzer diode
6877 : boot open diode.
7000 : front left-hand anti-lock brake sensor
7001 : power steering fluid pressure switch.
7005: front right-hand anti-lock brake sensor.
7010: rear left-hand anti-lock brake sensor.

- 7013 : gear lever neutral switch,
- 7014 : rear wheel ABS sensor.
- 7015: rear right-hand anti-lock brake sensor,
- 7016 : ABS acceleration sensor
- 7017 : ABS control unit fuse,
- 7018 : ABS control unit relay
- 7019 : idle maintaining simulation resistor,
- 7020 : anti-lock brake control unit
- 7025 : ABS hydraulic unit (GPF).
- 7026 : brake assistance electric pump
- 7027 : ABS solenoids fuse.
- 7028 : anti-lock braking system shunt
- 7029 : ABS pump fuse.
- 7030 : electric pump unit .
- 7031 : electric pump unit relay .
- 7040 : additional regulation unit (ARU).
- 7041: additional regulation unit electrical board.
- 7045 : clutch pedal information switch .
- 7046 : clutch position potentiometer.
- 7048 : piloted brake servo .
- 7049 : controlled brake servo control unit *.
- 7050 : traction control ECU.
- 7055 : traction control hydraulic unit .
- 7060 : traction control throttle actuator .
- 7065 : traction control throttle potentiometer .
- 7075 : traction control cut -off switch.
- 7076 : ABS switch indicator light relay
- 7077: hill holder cut-off switch.
- 7078 : hill holder buzzer .
- 7080 : brake fluid level information diode.
- 7090 : brake servo vacuum pump,
- 7100 : power steering servo-regulator
- 7105 : variable power assisted steering control unit.
- 7110 : power steering servo.
- 7111 : proportional solenoid variable power-assisted steering,
- 7112 : power steering pressure sensor.
- 7113 : power steering stop sensor *.
- 7115 : power steering control relay
- 7120 : converter during pressures,
- 7121 : electric pump diode power-assisted steering.
- 7125 : power steering power relay
- 7200 : trip computer-cruise control information relay.
- 7201 : color display control unit .
- 7205 : trip computer display switch,
- 7210 : trip computer
- 7215 : multifunction screen.
- 7216 : multifunction screen key pad *.

7220 : clock
7222 : outside temperature sensor,
7225 : clock + exterior .
7226: exterior temperature display
7300 : cruise control switch,

WIRING DIAGRAMS

7305 : cruise control switch,
7306: cruise control override switch (clutch)
7307 : cruise control override relay.
7308: cruise control safety switch (brakes).
7309 : cruise control circuit shunt - *engine check.
7310 : cruise control control unit.
7311 : cruise control fuse.
7312 : cruise control switch indicator light circuit diode.
7315 : cruise control vacuum pump- breather assembly.
7320 : cruise control override solenoid valve.
7400: external temperature display.
7500 : parking aid ECU .
7501 : laser distance guide.
7502 : laser range finder switch .
7503 : speaker (parking aid).
7504 : rear speakers (parking aid).
7505 : parking aid cut-off switch.
7506 : proximity sensor (front LH_ exterior).
7507 : proximity sensor (front LH_ interior).
7508 : proximity sensor (front RH_ exterior).
7509 : proximity sensor (front RH_ interior).
7510 : proximity sensor (rear LH_ exterior).
7511: proximity sensor (rear LH_ interior).
7512: proximity sensor (rear RH_ exterior).
7513: proximity sensor (rear RH_ interior).
7514 : buzzer (parking aid) .
7600 : under-inflation detector control unit.
7605 : under-inflation detector re-initialisation switch.
7700: steering wheel angle sensor.
7702 : front body height sensor *.
7703 : rear body height sensor *.
7704 : body height potentiometer .
7705 : body height sensor .
7706 : brake pressure sensor .
7707 : accelerator pedal position sensor .
7708 : front wheel movement sensor.
7709 : rear wheel movement sensor .
7710 : suspension switch.
7711 : front right -hand wheel movement sensor .

- 7712: front left-hand wheel movement sensor.
- 7713: rear right-hand wheel movement sensor.
- 7714: rear left-hand wheel movement sensor.
- 7715 : suspension control unit.
- 7716: suspension solenoid valve (single or front),
- 7717: rear suspension solenoid valve.
- 7718 : roll correction solenoid valve.
- 7719 : ADAC electro-hydraulic unit (active anti-roll).
- 7720: front left-hand damper actuator.
- 7721 : shock absorber auto anti-interference front LH.
- 7722: control unit *(72716 not found).
- 7723 : ADAC accelerometer (72716 not found).
- 7724 : variable damping accelerometer .
- 7725: front right-hand damper actuator.
- 7726 : damper auto anti-interference -front RH.
- 7730: rear left-hand damper actuator.
- 7731 : shock absorber auto anti-interference - rear LH.
- 7735: rear right-hand damper actuator.
- 7736 : shock absorber auto anti-interference rear RH.
- 7739 : centralised electronic unit motor .
- 7740 : suspension electro-hydraulic unit.
- 7741: front right-hand suspension solenoid valve unit.

WIRING DIAGRAMS

- 7742 : front left-hand suspension solenoid valve unit.
- 7743: rear right-hand suspension solenoid valve unit.
- 7744 : rear left-hand suspension solenoid valve unit.
- 7745 : vehicle height selector.
- 7746 : piloted rear suspension pad solenoid valve.
- 7747 : front suspension solenoid valve.
- 7748 : rear suspension solenoid valve.
- 7750 : suspension control board.
- 7760 : 73180 not found .
- 7770 : hydraulic fluid level and/or pressure warning buzzer .
- 7800 : stability checking ECU .
- 7801 : stability check cut_off switch.
- 7802 : stability check relay .
- 7803 : stability check steering wheel angle sensor .
- 7804 : accelerometer gyro stability check
- 7805 : pre_loud pump stability check .
- 7806 : hydraulic unit stability check .
- 7807 : brake circuit pressure sensor 1 .
- 7808 : brake circuit pressure sensor 2 .
- 8000 : air conditioning switch.
- 8001 : air conditioning compressor relay shunt .
- 8004: air conditioning cut-off control unit. *

- 8005: air conditioning compressor relay.
- 8006 : evaporator thermistor (if separate) .
- 8007 : pressostat.
- 8008 : air conditioning engine coolant temperature thermistor .
- 8009 : freon pressure sensor *.,
- 8010 : coolant temperature unit. (*)
- 8012 : air conditioning cut-off pressure switch.
- 8014: idling stability solenoid valve,
- 8015 : compressor cut -off relay controlled by coolant temperature unit.
- 8016 : compressor cut off relay controlled by the injection ECU.
- 8020 : air conditioning compressor .
- 8022 : air conditioning coolant thermal switch.
- 8025 : heater panel (if separate) .
- 8030 : passenger compartment air thermistor .
- 8031 : coolant thermistor .
- 8032: outside air thermistor.
- 8033 : sunshine temperature sender unit.
- 8034 : air to footwell temperature sender unit
- 8035 : passenger compartment temperature electronic thermostat (if separate) .
- 8036 : temperature display rheostat (if separate) .
- 8037 : air vent temperature sender unit.
- 8038 : luminosity sensor *.
- 8040 : blower speed rheostat (if separate) .
- 8043: right-hand blower control module.
- 8044 : left-hand blower control module.
- 8045: blower control module (if separate) ,
- 8046 : blower motor resistor (if separated).
- 8047 : blower speed control (if separated).
- 8048 : blower relay.
- 8050 : heater blower motor (if separated) .
- 8051: right-hand blower motor.
- 8052: left-hand blower motor.
- 8060 : heater unit.
- 8061 : 41414 not found .
- 8065 : mixing flap motor . (*)
- 8067 : air inlet flap control.
- 8068 : left-hand air inlet flap reduction motor.
- 8069: right-hand air inlet flap reduction motor.
- 8070: air inlet flap reduction motor .

WIRING DIAGRAMS

- 8071 : air distribution flap motor .(*)
- 8072 : ventilation flap motor .
- 8073 : footwell/demisting flap motor.
- 8074 : breaker valve .
- 8080 : air conditioning ECU .

- 8090 : compressor protection diode.
- 8096 : additional heating operation information diode.
- 8097 : fuel heating control switch.
- 8098 : additional heating.
- 8099 : additional heating burner *
- 8100 : front cigar lighter .
- 8105 : rear cigar lighter .
- 8110 : heated rear screen switch.
- 8112: rear screen demisting sensor.
- 8115: heated rear screen relay.
- 8116: rear screen heater time switch relay.
- 8118 : heated rear screen (left).
- 8119 : heated rear screen (right).
- 8120 : heated rear screen.
- 8121 : rear screen de-misting motor .
- 8125 : heated mirror (on the driver's side) (if separated electrical).
- 8130 : heated mirror (passenger's side) (if separated electrical).
- 8140 : heated windscreen.
- 8141 : heated windscreen switch.
- 8145 : heated windscreen relay.
- 8146 : heated windscreen timer unit .
- 8200 : coded anti-start keypad.
- 8201 : coded anti-start LED.
- 8203 : relay circuit diode injection control unit supply.
- 8205 : diagnostic indicator light circuit diode.
- 8206 : coded anti-start device door circuit diode.
- 8207 : immobiliser relay for diesel pump.
- 8208 : immobiliser / transponder *.
- 8209 : transponder coil *.
- 8220 : analogue module transponder .
- 8221 : control module transponder.
- 8300 : driver's heated seat switch.
- 8301 : electrically heated seats control unit.
- 8302 : driver's heated seat rheostat.
- 8303 : passenger's heated seat rheostat.
- 8305 : passenger's heated seat switch.
- 8306 : left-hand rear heated seat switch.
- 8307: right-hand rear heated seat switch.
- 8308: heated seat relay.
- 8310: heated seat (on the driver's side).
- 8311 : heated seat-thermostat.
- 8315: heated seat (passenger's side).
- 8320 : heated rear seat.
- 8321 : heated seat timer relay (driver).
- 8322 : heated seat timer relay (passenger) .
- 8323 : heated seat timer relay (rear LH) .
- 8324 : heated seat timer relay (rear RH) .

8325 : left rear heated seat .
8326 : right rear heated seat
8327 : 73596 not found .
8328 : 73597 not found .
8329 : 73606 not found .
8330 : 73600 not found .
8331 : 73601 not found .
8332 : 73602 not found .
8333 : 73603 not found .

WIRING DIAGRAMS

8334 : 73604 not found .
8401 : impedance adaptor .
8402 : aerial lead.
8403: aerial filter.
8404 : aerial.
8405 : electric aerial.
8406 : electric aerial module.
8407 : duplexer .
8408 : radio amplifier .
8409 : heated rear screen aerial assembly *.
8410 : radio.
8411: radio balance front left/right.
8412: radio balance front/rear.
8413: radio control.
8415: compact disc player.
8416: compact disc interface.
8420 : front door speakers (on the driver's side).
8421 : front speakers.
8422 : front door speakers (left).
8423 : front door speakers (right).
8425: front door speakers (passenger's side).
8430 : speaker (rear LH).
8435 : speaker (rear RH).
8440 : left-hand front tweeter speaker.
8442: front left-hand mid range speaker.
8443 : speaker boomer (front LH).
8445: right-hand front tweeter speaker.
8447 : front right -hand mid range speaker .
8448 : speaker boomer (front RH).
8450: left-hand rear tweeter speaker.
8452 : rear left-hand mid range speaker .
8453 : speaker boomer (rear LH).
8455: right-hand rear tweeter speaker.
8457: rear right-hand mid range speaker.
8458 : speaker boomer (rear RH).

8460 : headphone socket left-hand rear.
8465: headphone socket right-hand rear.
8470 : police radio electrical supply (front *).
8471 : rear police radio supply 1 .
8472 : rear police radio supply 2 .
00.8475 : radio telephone instrument panel.
8480 : radio telephone transmitter-receiver .
8481 : car-phone loudspeaker .
8482 : car-phone microphone.
8483 : car-phone on warning buzzer.
8484 : car phone aerial.
8485 : car-phone key pad.
8500 : navigation control unit.
8501 : GPS aerial *.
8502 : on_board navigation system speaker *.
8503 : control key pad *.
8504 : traffic information unit *.
8505 : traffic information switch *.
8600 : alarm unit.
8601 : anti-theft alarm key switch.
8602 : alarm ultrasonic unit interior protection unit (unit theft).
8603 : alarm switch.
8604 : ultrasonic sensor .
8605 : alarm siren.
8606 : alarm LED.
8607 : ultrasonic transmitter .

WIRING DIAGRAMS

8608 : ultrasonic receiver .
8609 : ultrasonic transmitter + alarm LED.
8610 : luggage compartment alarm contact .
8611 : bonnet alarm contact .
8612: right-hand rear hinged door alarm switch.
8613: alarm rear left-hand door switch.
8614: alarm rear right-hand door switch.
8615 : dipped beam supply relay for alarm.
8616: alarm relay.
8617: anti-theft alarm warning relay.
8618 : anti-lifting contact.
8630 : passenger compartment protection unit.
8700 : electric sun-blind motor.
8701 : electric blind switch.
8702 : rear electric blind switch.
9000 : central unit.
9005 : left front side lamp station.
9010 : fan unit station.

- 9015 : right front side lamp station.
- 9020 : wipe/wash station.
- 9025 : sensor information station.
- 9030 : left front door station.
- 9031 : seat unit .
- 9035 : instrument panel station.
- 9040 : display station.
- 9045 : passenger compartment station
- 9050 : right front door station.
- 9055 : signalling switch station.
- 9056 : automatic lighting unit .
- 9060 : wiper switch station.
- 9065 : console station.
- 9070 : towing station.
- 9075 : left tail lamp station.
- 9080 : tailgate station.
- 9085 : right tail lamp station.



شرکت نیروی برق فشار قوی و انتقال نیرو
ایران خودرو، سبزینار، (تهران)
راهنمای تعمیرات

فصل : راهنمای قطعات الکتریکی

بخش :

مجموعه : پژو ۲۰۶ مولتی پلکس

کد شناسائی: 1303G01902131/1

پانیز ۸۲

تهران - ایران